

ERGO METRO (AM71/AM72) 8.5" EXTERNAL TETHER KIT


Assembly Instructions

PARTS LIST

2x 30818507 – External tether
straps w/45° anchor
2x 30546207 – 7/16-20 Nylock Nut

TOOLS NEEDED

1x 5/8" Wrench


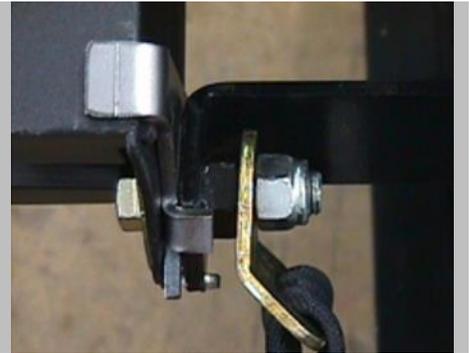


INSTRUCTIONS

STEP 1: Pull up on the center actuator rod and move the seat completely forward.



STEP 2: With the seat belt mounting bracket exposed, locate the retractor mounting bolt and the buckle mounting bolt (Figure 1).

FIGURE 1

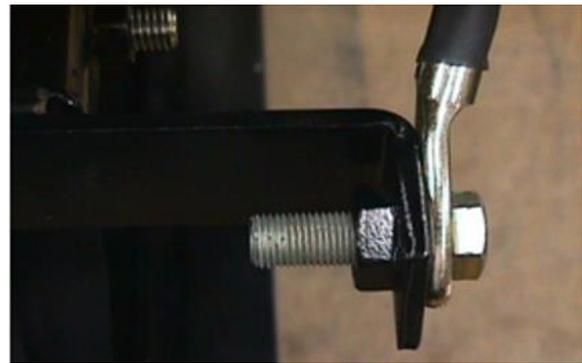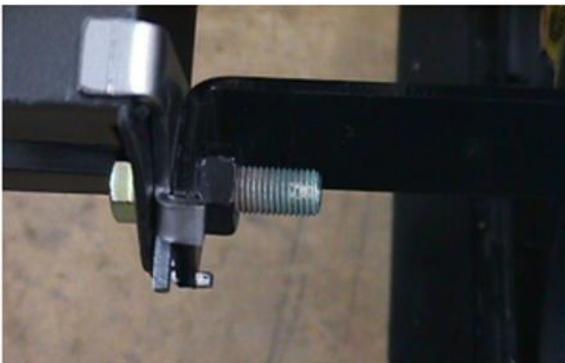

STEP 3: With the anchor plates angled towards the center of the seat, slide the end of the first tether over the retractor mounting bolt and the second over the buckle mounting bolt (Figure 3)


FIGURE 3

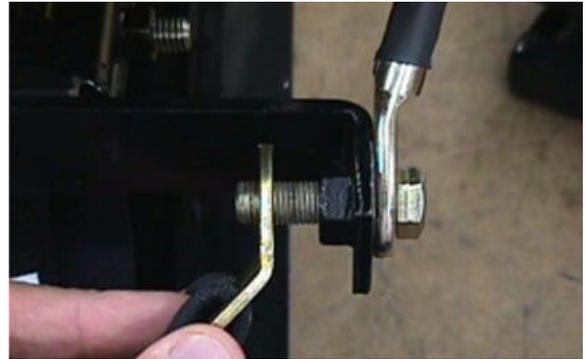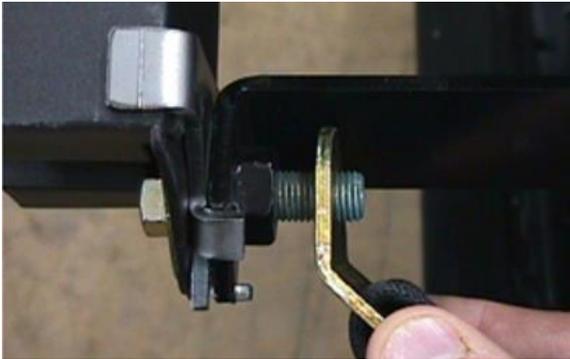

STEP 4: Secure both tethers into place by attaching a Nylock nut to each bolt (retractor mounting bolt shown in Figure 4).



STEP 5: Tighten the nuts so there are approximately 2 to 3 threads showing at the end of the Nylock nut. **DO NOT RUN THE NUTS TIGHT TO THE TETHER ANCHORS!** The anchor plates must be free to rotate on the retractor and buckle mounting bolts to prevent binding when vertical adjustments and/or movements in the suspension occur. (Figure 5 shows the retractor side).

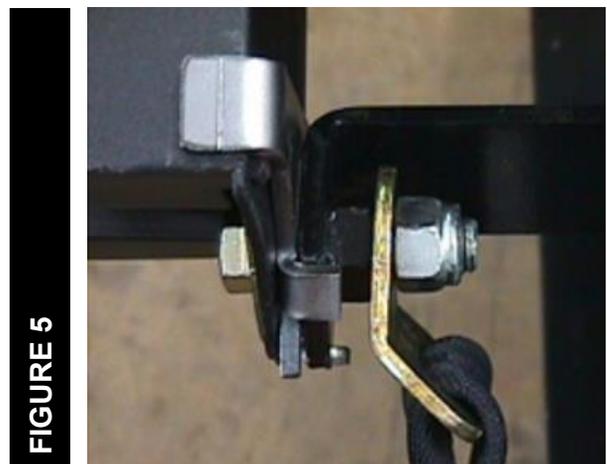



STEP 6: Attach the opposite ends of the tethers to the vehicle with the appropriate hardware (not supplied) and properly torque to the OEM specification.

Part numbers: 7227818

Performance Seats, Inc
24801 Capital Blvd , Clinton Twp, MI 48036 USA

Main: +1 800-873-2276

30818907 - REV 3 (5/29/2025)

Page 3 of 3

ergotransit.com