

KIT - AM14 SUSPENSION MAT - DYMETROL

Assembly Instructions

PARTS LIST

1x 20046990 - AM14
SUSPENSION MAT -
DYMETROL C150 - WITH
SUBHOLE

TOOLS NEEDED

1x 5MM Hex Wrench
1x Spring Puller Tool (T-Hook)



INSTRUCTIONS


STEP 1: Remove adapter bracket (if applicable) to gain access to the mat by using a 5MM hex wrench to remove all (6) screws (figure 1).

FIGURE 1



STEP 2: Remove old mat by pulling the hooks from the holes in the cushion frame. The mat may be black, orange, or grey (figure 2).

FIGURE 2

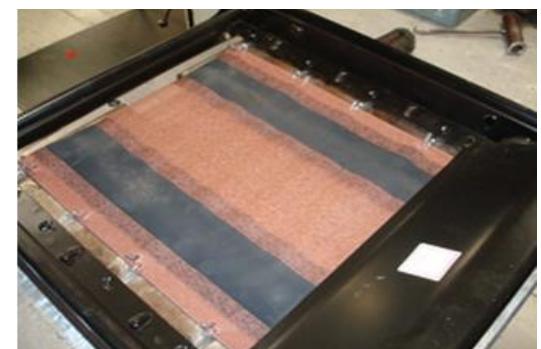


STEP 3: Install the new mat by positioning all lobster hooks into the holes on the right side of the seat cushion frame (figure 3).


FIGURE 3



STEP 4: For the left side, use a T-hook tool to pull the lobster clips into position. Start with the center hook first and follow the order shown. Use the T-hook on the center wire and manipulate the lobster hook into the hole. Note: The lobster hook can get damaged if this procedure is not followed. (figure 4).

FIGURE 4

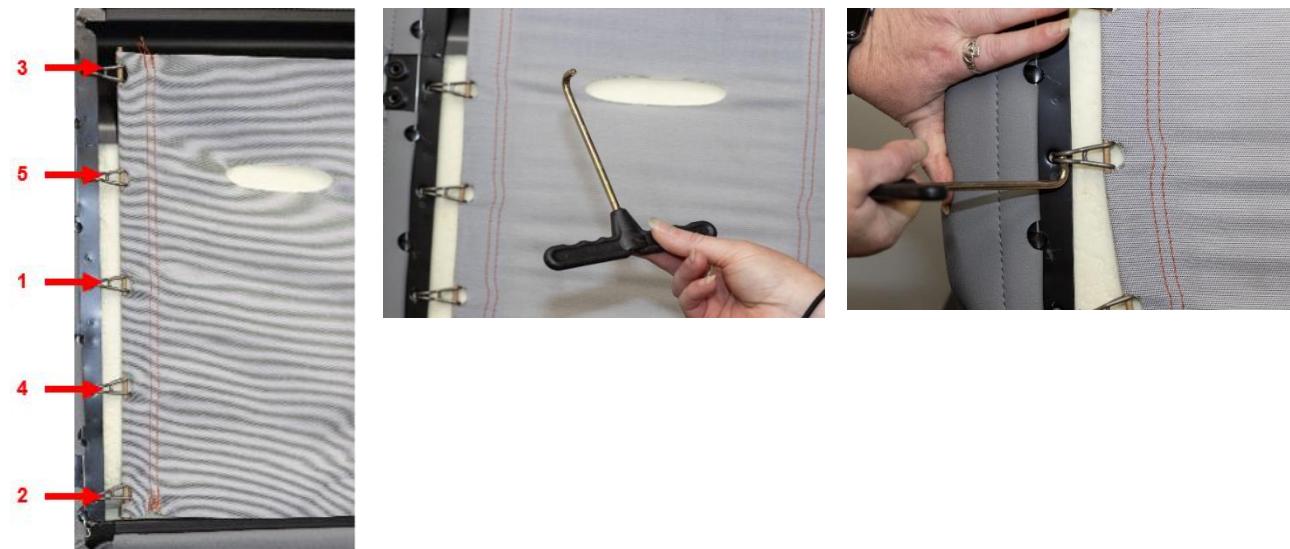

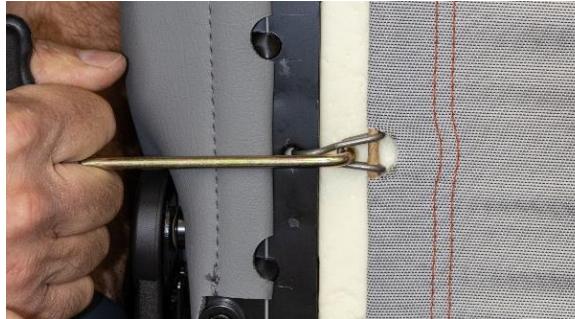

Part numbers: 20046990S

Performance Seats, Inc
24801 Capital Blvd, Clinton Twp, MI 48036 USA
Main: +1 800-873-2276